



IMPORTANT

When operating the ratchet jack, avoid fully un-threading. Test the travel limits of the ratchet jack before assembly to the crane and before loading, to verify it does not fully un-thread. Contact Thern if it does fully un-thread.

Ensure that both threaded ends of the ratchet jack are threaded an equal distance out of the jack when assembled to the crane. If threaded ends are not equal, the crane boom will not be able to operate in its full range of motion, and equipment damage could occur.

⚠️WARNING

Do not make adjustments to the ratchet jack while the crane is loaded. To do so may require the use of excessive force which could allow the operator to shear the travel limit pin and cause damage or injury.

Do not force the ratchet handle past travel limits. This could shear the travel limit pin and cause damage or injury.

Do not adjust the ratchet jack with the use of a ratchet handle extension. To do so could allow the operator to shear the travel limit pin and cause damage or injury.

Adjustable Ratchet Jack - Verify Travel Limits

